


# MUSE series

User's manual

#### **SPECIFICATIONS**


Thank you for purchasing the MUSE series loudspeaker system. MUSE series is two-wayfull range loudspeaker. Designed with European customize bass speaker, The HF is 1"throat diameter compression driver. MUSE series loudspeaker have a very flat frequency response in it working frequency range, high frequency and low frequency have a smooth connection by the optimal X-over point, it's very good for near field performance. MUSE series can output a very deep and warm low frequency when install close to the wall, because of special designed of the vent in cabinet. The SUB series subwoofer used the 15 inch European customize woofer which is specially used for MUSE series full frequency loudspeaker. SUB series subwoofer can output very deep and warm sound when it near the wall because of special designed of the vent in cabinet.

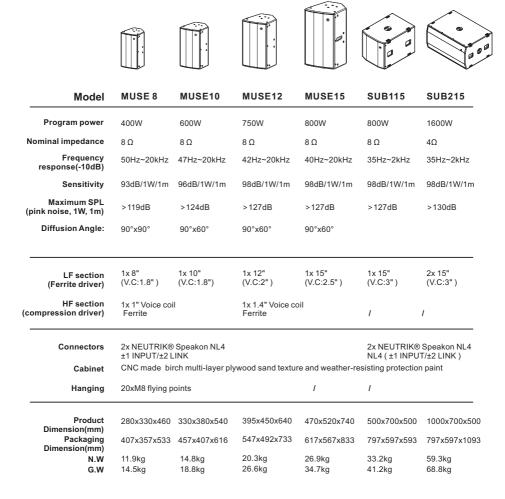

All specifications are subject to change without notice.


## MUSE Wiring:


- ±1, Full range/INPUT
- ±2, Sub/LINK
- NL4 Speakon plug

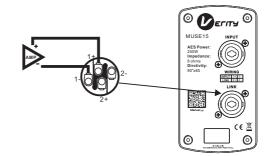

## SUB Wiring:

- ±1, Full range/INPUT
- ±2, Sub/LINK
- NL4 Speakon plug

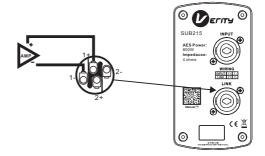

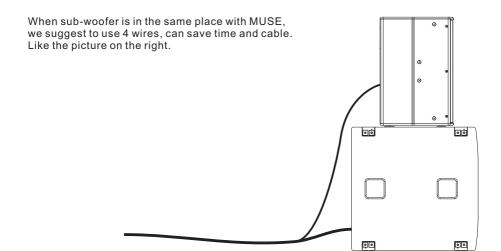

## Hanging:

MUSE series loudspeaker has M8 flying points, you need to remove the screws of the flying points when need to hang the loudspeaker.



And must check if all the screws are screw in to the flying points after installation, if not it may cause air leakage and make sound worse.




## Angle adjustment:

①MUSE series loudspeaker have a rotatable horn, so you can adjust it by yourself when you need to change the angle.


Default angle: Horizon 90° Vertical 60°


②Logo Angle adjustment: MUSE series loudspeaker have a rotatable Logo. Pull out the logo 3 to 6 mm gently and then rotate it.

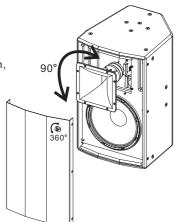

#### Accessories:

- 1) With M20 inner thread aluminum chassis seat
- 2 Loudspeaker support rod with M20 thread
- 3 U-shaped hanging parts, flexible angle adjustment, 15° and 30° increments per scale.

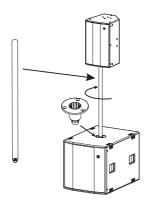

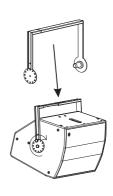

## Install loudspeaker with bracket:


Choose the right flying points and install with bracket\*.

\* a safety security stell wire is necessary!

There is no bracket in the package, please purchase by yourself.

To achieve the best low frequency response, should assemble the cabinet close to the corner. The back hole of the cabinet should be keep 20-30cm from the wall.



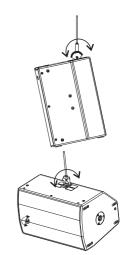

A safety security stell wire is necessary! Adjust the angle

## Install loudspeaker with eye bolt:

Choosing the right flying points and install with eye bolt.

When installation try your best to make cabinet close to the wall 20cm to 30cm, that can improve the bass performance.







M8X30 eye bolt

There is no eye bolt (M8x30mm) in the package, please purchase by yourself.



To achieve the best low frequency performance, should assemble the cabinet close to the corner. The back hole of the cabinet should be keep 20-30cm from the wall.

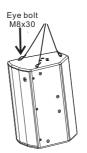

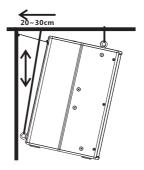



Verity Audio reserves the right to make any changes to the product specifications without prior notice. Final specifications to be found in the user manual.